

Article - Transportation

§22-611.

(a) In this section, “engine brake” means an add-on engine compression brake for diesel engines.

(b) A person may not operate a commercial motor vehicle equipped with an engine brake unless the engine brake is connected to a properly functioning exhaust muffler system in constant operation when the vehicle’s ignition is engaged.

(c) A person may not disable the exhaust muffler system of a commercial motor vehicle that is equipped with an engine brake except to make a bona fide repair or replacement.